



www.vs-furniture.com

OPERATING INSTRUCTIONS

StepByStep. Models: 02993, 94, -97, -98.

1. Table height adjustment. Ratchet type height adjustment in steps of 53; 59; 64; 71; 76; 82 cm, sizes 2 to 7. There are 3 basic height settings each with 3 **fine settings**:

- Loosen the fixing screw (using SW5 hexagon key) or hand wheel (depending on the version).
- Turn the skid of the table in a clockwise direction.
- Release it from its anchorage and adjust to the lower or upper size (look at height scale).
- Secure with the fixing screw or hand wheel.

- Basic height adjustment

- Completely remove the fixing screw or hand wheel (Handwheel rotates freely in the thread ! Note child's safety device is in place-now pull the handwheel and turn it anticlockwise until it engages the thread again, then continue to turn).
- Until the wheel can be removed completely.
- Move the skid of the table vertically to required position (look at height scale).
- Secure once again with the fixing screw or hand wheel.

2. Table top adjustment (only for Models 02997 and 02998)

- Inclination adjustable in steps of 0°; 5°; 10°; 16; 20°.
- Press the locking handle (on the pupil's side at the right and beneath the table top) upwards (towards the table top) and hold it.
- Move the table top by taking hold of it at the side until the required inclination is reached.
- It then clicks into one of the available steps.

Intended use (field of application). This desk/table has been designed exclusively for use in schools and is therefore intended solely for this purpose. Any other use that goes beyond the intended purpose (e.g. in workshops, storage areas or damp locations) is classed as not in accordance with the intended use. The company VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG shall not be held liable for damage arising from such non-intended use.

Cleaning tips for melamine-resin-coated table tops and powder-coated surfaces. Clean areas of light dirt with a moderately damp cloth or sponge. To clean areas of heavier dirt, you can add a mild cleaning agent (household cleaner, neutral cleaner or soap) to the water. Do not use sharp or abrasive cleaning agents or cleaning pads (e.g. pot scourers) as these may damage the surface. Do not use excessive amounts of water to clean the table tops. Heavily fouled table tops or powder-coated surfaces, caused for example by non-standard use, should only be cleaned by specialists. If necessary, please contact our Field Service.

Forwarding/disposal. Remember to include these instructions for use when forwarding the product to third parties. Please contact your relevant local authority for information on environmentally compatible disposal.